

INSTALLATION INSTRUCTIONS

PRODUCT DESCRIPTION

MODELS: BLP12336-30, BLP12336-40, BLP12336-60,
BLP12660-30, BLP12660-40, BLP12660-60, BLP6636-30, BLP6636-40,
BLP6636-60, BLP6326-30, BLP6326-40 & BLP6326-60


INTRODUCTION

The Bastion LED Panel comes in multiple sizes and wattages and is designed to fit a lay in grid system. It has a white frame, comes with a standard driver and has a five year warranty.

BOX CONTENTS

- LED Panel
- Driver

SPECIFICATION

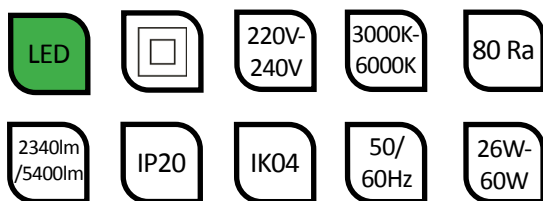

- 90lm/W.
- Lifud Driver included.
- White Finish.
- LED: 132-300pcs of 4014
- Working Temperature: -10°C - 50°C

Dimensions:

- BLP12336-30/40/60: L: 1195 x W: 295 x D: 9mm
- BLP12660-30/40/60: L: 1195 x W: 595 x D: 9mm
- BLP6636-30/40/60: L: 595 x W: 595 x D: 9mm
- BLP6326-40/60: L: 595 x W: 295 x D: 9mm



(Image shown - BLP6636)

Automatic Circuit Breaker Type	B6	B10	B13	B16	B20	C10	C13	C16	C20
Rated Current	6A	10A	13A	16A	20A	10A	13A	16A	20A
Installation	1.5	1.5	1.5	2.5	1.5	1.5	1.5	1.5	2.5
26W	9	15	20	24	30	15	20	24	30
36W	6	11	14	17	22	11	14	17	22
60W	4	6	8	10	13	6	8	10	13



Red Arrow Trading Ltd
Elsworth House, Herries Road South
Sheffield, S6 1QS

Tel: 0800 195 0006 Fax: 0870 195 0006

Email: sales@redarrowtrading.com Web: www.redarrowtrading.com

INSTALLATION INSTRUCTIONS

PRODUCT DESCRIPTION

**MODELS: BLP12336-30, BLP12336-40, BLP12336-60,
BLP12660-30, BLP12660-40, BLP12660-60, BLP6636-30, BLP6636-40,
BLP6636-60, BLP6326-30, BLP6326-40 & BLP6326-60**

SAFETY WARNING


- The installation should be carried out by a qualified electrician in compliance with the current edition of the IEE Wiring Regulations.
- Prior to installation, carry out the necessary risk assessment considering the people who could be at risk, the level of risk and the precautions required to control the risk
- Ensure that the circuit supply is isolated either by the circuit supply fuse being removed or the applicable circuit breaker being turned off before installation or any maintenance.
- Check the total load on the circuit ensuring the luminaire does not exceed the rating of the circuit cable, fuse or circuit breaker.
- If the fitting incorporates control gear, ensure careful sizing to avoid instances of nuisance tripping of the protective device used in the installation.
- Follow the provided installation instructions, using the fixings supplied or recommended.

INSTALLATION INSTRUCTIONS


1. Ensure the mains supply is switched off before commencing any work.
2. Connect wires from the mains supply to the LED Driver. (Note: Brown = L, Blue = N.) Terminate the Earth from the supply safely.
3. Connect the LED Panel to the LED Driver with the male / female connectors provided.
4. It is recommended that the LED Driver is placed on a ceiling tile next to the void.
5. Now fit the LED Panel into the ceiling grid and let it rest in position.
6. Do not cover the LED Panel with insulation - allow a space of 100mm around the panel for free air movement.
7. Do not use the LED Driver supplied to power any other fitting or device other than the LED Panel supplied.
8. Reconnect the mains supply.

INSTALLATION DIAGRAMS

1. Remove the ceiling tile or existing light fitting, ensure the power has been disconnected.

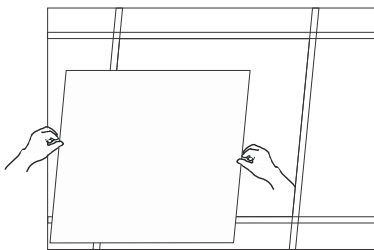

2. Connect the wires from the mains supply to the LED Driver.

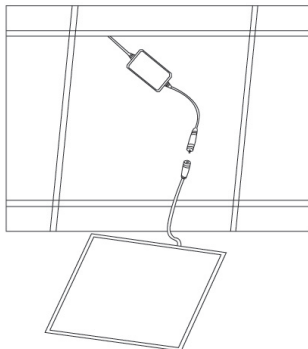

Red Arrow Trading Ltd
Elsworth House, Herries Road South
Sheffield, S6 1QS

Tel: 0800 195 0006 **Fax:** 0870 195 0006


Email: sales@redarrowtrading.com **Web:** www.redarrowtrading.com

INSTALLATION INSTRUCTIONS


PRODUCT DESCRIPTION

MODELS: BLP12336-30, BLP12336-40, BLP12336-60,
BLP12660-30, BLP12660-40, BLP12660-60, BLP6636-30, BLP6636-40,
BLP6636-60, BLP6326-30, BLP6326-40 & BLP6326-60

3. Fit the LED Panel Light into the ceiling grid.

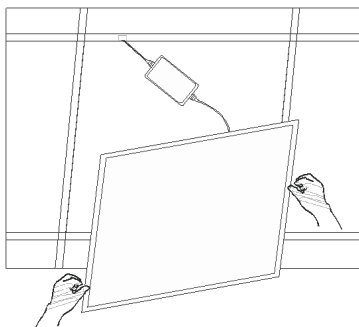

4. Reconnect the mains supply once the LED Panel is securely in position.

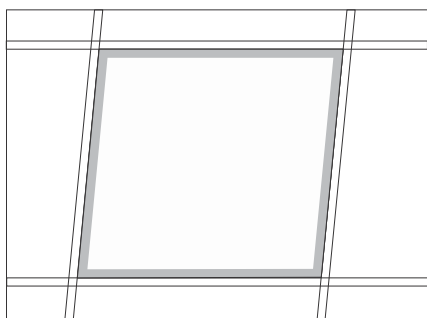

GUARANTEE

This product is guaranteed for a period of 5 years from the date of purchase. The guarantee is invalid in the case of improper use, tampering, removal of the Q.C. date label, installation in an improper working environment or installation not according to the current edition of the I.E.E. Wiring Regulations (BS7671).

The guarantee is also invalidated if the luminaire has been Mega tested. Should this product fail during the guarantee period it will be replaced free of charge, subject to correct installation and return of the faulty unit. We do not accept responsibility for any installation costs associated with the replacement of this product. Your statutory rights are not affected. We reserve the right to alter specifications without prior notice.

MAINTENANCE

- This fitting will require routine cleaning if used in adverse (dust, paint, welding, oils etc) environments.
- When this fitting comes to the end of its life or you choose to replace it, please do not dispose of it with your normal household waste. Please recycle where the facilities exist, check with your local authority or retailer for suitable options.



Red Arrow Trading Ltd
Elsworth House, Herries Road South
Sheffield, S6 1QS

Tel: 0800 195 0006 **Fax:** 0870 195 0006

Email: sales@redarrowtrading.com **Web:** www.redarrowtrading.com