

RCD Fused Connection Unit

Model: RCD10WPV

RCD Double Sockets

Models: RCD05WAV, RCD06WPV,
RCD07MAV, RCD08MPV



TIME GUARD[®]
LIMITED

Installation & Operating Instructions

General

The Timeguard range of RCDs provides protection against fire hazard and rapid double pole disconnection from electric shock for the appliance and cable connected to it. They comply fully with BS7288 and BS1363. They are designed to mount on either a BS4662 recessed box or a BS5733 surface mount box (plastic versions only).

Note: RCD – Residual Current Device.

RCD Fused Connection Unit

Model: RCD10WPV.

Colour coded positive action buttons for Testing and Resetting the RCD.

1




BS1362 fuse holder.

Status indicator shows red for 'ON'.

The RCD fused connection unit is a latching (passive) version. If set, this will retain closed contacts if the mains supply is interrupted – essential for applications such as freezers.

Pack Contents

- 1 RCD10WPV.
- 2 3.5mm diameter screws 45mm long.
- 1 Warning label.
- 1 Instruction leaflet.
- 1 Cable clamp and cable clamp screw.

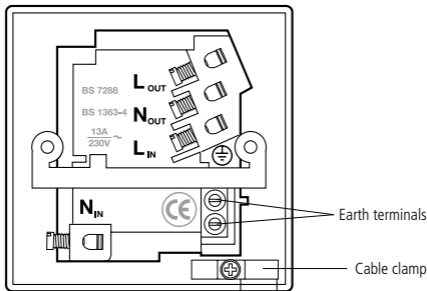

Fused Connection Unit Connections

- Supply Brown (Red) (Live) to L IN.
- Supply Blue (Black) (Neutral) to N IN.
- Supply Bare Earth Wire, sleeved Green/ Yellow, to E ⊕.
- Load Brown (Live) to L OUT.
- Load Blue (Neutral) to N OUT.
- Load Green/ Yellow (Earth) to E ⊕ (one or both terminals can be used as convenient).

RCD Double Sockets

White plate models: RCD05WAV, RCD06WPV.


Switched for convenience and extra safety.



Status indicator shows red for 'ON'.

Colour coded, positive action buttons for Testing (T) and Resetting (R) the RCD.

Metal clad models: RCD07MAV, RCD08MPV.

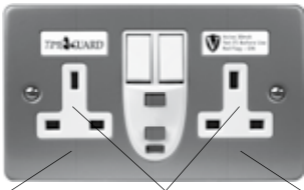

Metal clad construction giving the best protection against physical damage.

RCD unit protects both socket outlets.

Fully meets the BS1363 current rating.


The RCD socket comes in two forms, a latching (passive) version with the penultimate letter set to 'P' in the type number and a non-latching (active) version which has the penultimate letter set to 'A'.

The latching version, if set, will retain closed contacts if the mains supply is interrupted – essential for applications such as freezers.

The non-latching version, if set, allows the contacts to open if the mains supply is interrupted – a 'safety must' for applications such as power tools.

Pack Contents

- 1 RCD05WAV, RCD06WPV, RCD07MAV, RCD08MPV.
- 1 RCD05WAV, RCD06WPV – 3.5mm diameter screws 32mm long.
- 2 RCD07MAV, RCD08MPV – 3.5mm diameter screws 25mm long.
- 1 Warning label.
- 1 Instruction leaflet.
- 1 Metal surface box (RCD07MAV, RCD08MPV only).

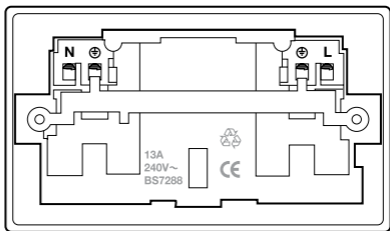

Fused Connection Unit Connections

Supply Brown (Red) (Live) to L.

Supply Blue (Black) (Neutral) to N.


Supply Bare Earth Wire, sleeved Green/ Yellow, to E \oplus .
(for double sockets one or both terminals can be used as convenient)

Metal Clad

Lock rings, with a maximum thickness of 4.2mm and a maximum diameter of 25.7mm must be used on the inside of the box on TL (top left) and TR (top right) entries to secure the gland or conduit. The gland or conduit must not project into the box beyond the lock ring, a male adaptor should be used within the box on TC (top centre) and BC (bottom centre) entries along with a female coupler on the outside to terminate cable glands or conduit.

Cable gland or conduit entry in TC or BC using a male adaptor with a female coupler.

Cable gland or conduit entry in TL or TR using a lock ring inside the box.

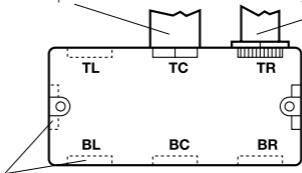

20mm knockout positions.

View of inside of RCD socket outlet back box.

General RCD Instructions

The RCD should form part of a 30A ring main or terminate a spur off a 30A ring main. The cable connecting to the supply to the RCD should be either: 2x 2.5mm² for the ring main or 1x 2.5mm² for the spur.

RCD10WPV only – Fit the appropriate BS1362 fuse to suit the load appliance to be connected.

The cable connecting the load appliance (spur only) should be rated according to the fuse fitted to the connection unit.

Strip sleeving and insulation and cut wires as required for the appliance cable. Tighten the screw terminals onto the exposed wires maintaining the correct polarity, then fit the cable into the cable clamp groove and tighten down the clamp box to retain the cable.

6

All RCDs – Ensure that there is both sufficient length of the supply cable tail(s) to enable easy wiring.

Strip sleeving and insulation and cut wires as required.

Tighten the screw terminals onto the exposed wires maintaining correct polarity and offer the unit up to the wall box, forming the cable as required.

Screw RCD to wall box and tighten sufficiently to hold in place. Do not over tighten.

General RCD Operation

Always test the RCD before use.

To test:

RESET – press the grey/ blue button marked Reset (R), the status indicator should show red.

TEST – press the red button marked Test (T), status indicator should show black. This indicates that the RCD has been tripped and power has been disconnected from the outlet.

RESET – press the grey/ blue button marked Reset (R) again, the status indicator should show red.

If all the above operations work satisfactorily, the RCD is safe for use. If the procedure is not completed satisfactorily do not use the RCD and seek professional advice.

In applications such as hand driers it may not be practical to expect each user to test before use. In this case we suggest an appropriate person applies the test routine twice a day.

To use:

After satisfactorily testing the RCD, any connected appliance may be switched on, and used in the confidence that the user is protected from electric shock by rapid disconnection.

If the RCD trips:

Turn the appliance switch off, press the Reset R button and note that the status indicator turns red. Switch the appliance on and if the RCD trips again, switch off the appliance and do not use it, as it may be faulty. Seek professional advice.

General RCD Specifications

Voltage:	230V AC 50Hz
Max Current:	Fully complies with the current rating required by BS1363
Rated Trip Current:	30mA
RCD Type:	Double Pole, suitable for 2 and 3 wire applications
Breaking Capacity:	250A (Earth leakage)
Through Fault Withstand:	1500A
Operating Temperature Range:	-5° to 40°C
Trip Speed:	Less than 40msec at 150mA residual current
Fully Complies With:	BS7288 & BS1363
Minimum Box Depth Required:	25mm
Fixed Cable Capacity:	1x 8mm ² or 2x 4mm ² or 3x 2.5mm ²
Flexible Cable Capacity: (RCD10WPV only)	10.5mm diameter maximum

Safety Issues to Remember

- Electricity can be dangerous, use of an RCD should not be regarded as a substitute for basic electrical safety precautions.
- Always test the RCD before use. If the test procedure is not completed satisfactorily or an appliance continues to trip the RCD seek professional advice and switch off the appliance.
- To clean use a dry cloth only. Do NOT use any liquid cleaners.
- The RCD should NOT be used when it could come into contact with liquids or excessive atmospheric pollution.
- A warming of the casing during use is normal.

9

Wiring Tests – Important

Remove this product from circuit if carrying out tests (as described in the IEE Wiring Regulations) for earth loop impedance, prospective short circuit current and insulation resistance.

Use the enclosed warning label to ensure this is carried out.



5 Year Guarantee

In the unlikely event of this product becoming faulty due to defective material or manufacture within 5 years of the date of purchase, please return it to your supplier in the first year with proof of purchase and it will be replaced free of charge. For the second and third years or any difficulty in the first year telephone the helpline on 020 8450 0515.

Note: A proof of purchase is required in all cases. For all eligible replacements (where agreed by Timeguard) the customer is responsible for all shipping/postage charges outside of the UK. All shipping costs are to be paid in advance before a replacement is sent out.

For assistance with the product please contact:

HELPLINE
020 8450 0515

or email helpline@timeguard.com



For a product brochure please contact:

Timeguard Limited.

Victory Park, 400 Edgware Road,
London NW2 6ND

Sales Office: 020 8452 1112

or email csc@timeguard.com

A **theben** Group Company

Designed in the U.K. 67.058.340 (Issue 2)